



# QC Control Upload

## 1. Uploading QC material information

- 1) Copy the 'control\_material.xml' file to the USB memory root.
- 2) After inserting the USB memory into PT10V, Select "Setting > Analysis > QC Material" and follow the procedure below.

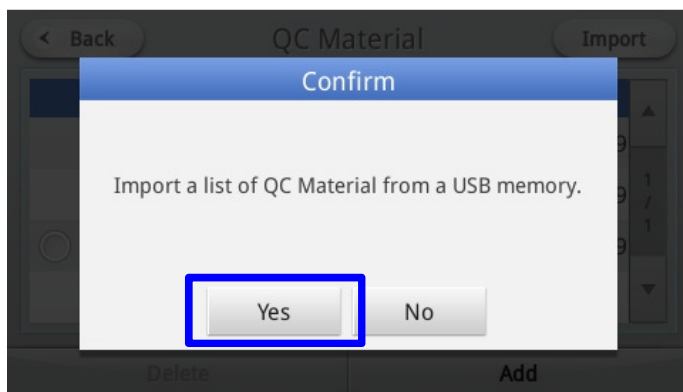

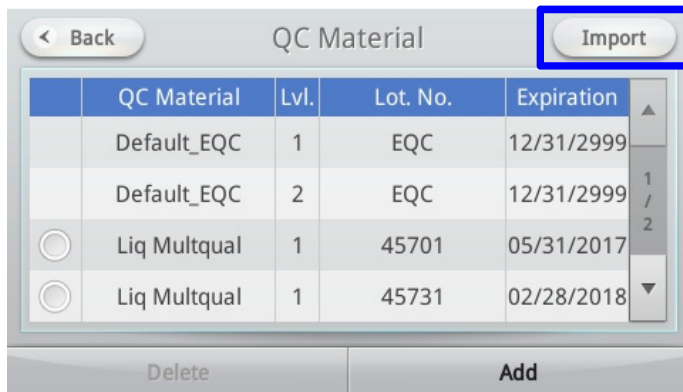

- If user resets the PT10V to factory settings by selecting "Setting > System > Initialization > Delete all results and settings" menu, the uploaded QC material information is initialized together. In such a case, you can reapply the QC material information by uploading the provided 'control\_material.xml' file again.